



## USER GUIDE

!!! Please refer to our website: [www.geemarc.com](http://www.geemarc.com) for an up to date user guide, as there may be important updates and changes you need to be aware of !!!

### What's in the box

- Wake & Shake Light • Power supply unit • This instructions guide • 1 Shaker

### Signs and symbols

The following symbols appear in the instructions for use and on the battery door.

-  **WARNING :** Warning instruction indicating a risk of injury or damage to health.
-  **IMPORTANT :** Safety note indicating possible damage to the device/ accessory.
-  **NOTE :** Note on important information.

## 1. Safety notes

### WARNING

- Only operate the device with the power supply unit provided and the mains voltage specified on the power supply unit.
- Do not operate the device if it is visibly damaged.
- In the event of defects or operational faults, switch the device off immediately and disconnect it from the mains socket.
- Do not pull on the mains cable or on the device to disconnect the power supply unit from the socket.
- Never plug in or unplug the power supply unit when you have wet hands.
- Never hold or carry the device by the mains cable.
- Keep packaging material away from children (risk of suffocation).
- Arrange the mains cable so that no-one will trip over it.
- Never use the device in proximity to moisture.

## 2. Intended use

The Wake-up Light wakes you from sleep in a gentle and natural manner. The LED light gradually becomes brighter like a rising sun, allowing your eyes to slowly become accustomed to the light conditions and your body to gently prepare itself for waking up. The light intensity can be set to your personal preferences. Along with the simulated sunrise, you can set an acoustic alarm to help you wake up. Choose between the radio, a beep or five natural sounds or you can select shaker vibration. The Wake-up Light provides a rested and pleasant start to your day.

## 3. Device functions:

- Clock display
- Wake-up function with simulated sunrises and alarm
- Two alarms selection
- Radio
- Goodnight function
- 5 natural sounds
- Shaker vibrations
- LED light can be used as a lamp
- Mood light function.
- USB Smart Phone charger.
- MP3 Input.

### WARNING

- The device is only intended for the purpose described in these instructions for use. The manufacturer is not liable for damage resulting from improper or careless use.

## 4. Initial use

- Remove the packaging material.
- Check that all parts listed are present.
- Check the device, mains plug and cable for damage. Place the device on a firm, even surface.
- Remove the battery compartment cover (A11) on the rear of the device and insert the 4 x AA batteries with corrected polarity battery symbol on compartment. The battery supplies power to the device in the event of a power failure and is not intended to be used as a permanent power supply.
- Plug the power supply connector into the power supply socket on the underside of the device.
- Insert the mains plug into a suitable socket. The time will display and you can set the hour format.

-  **NOTE:** All settings will go back to normal time mode after 6 seconds, press the TONE button to exit if you want to exit the settings.

## 5. Cleaning and maintenance

- Clean the device with a dry cloth.
- Do not use any abrasive cleaning products.
- Protect the device from knocks, damp, dust, chemicals, drastic changes in temperature, and nearby sources of heat (ovens, heaters).

## 6. Technical Data

- **Dimensions:** 120 x 170 x 120mm
- **Weight:** approx. 508g
- **Voltage supply:** 100-240V; 50/60Hz; 0.7A
- Protection class II
- For indoor use only
- **Radiofrequency range:** 87.5-108.0 MHz FM
- **Illuminance:** 300lux

## 7. GUARANTEE

From the moment your Geemarc product is purchased, Geemarc guarantees it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at [www.geemarc.com](http://www.geemarc.com).

The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorised Geemarc representative.

The Geemarc guarantee in no way limits your legal rights.

**IMPORTANT:** YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only.

## 8. DECLARATIONS:

### CE Directives

Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the RED 2014/53/UE.

The CE declaration of conformity may be consulted at [www.geemarc.com](http://www.geemarc.com)

### Recycling Directives

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life to be recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin. Please use one of the following disposal options:


- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.




For product support and help visit our website at [www.geemarc.com](http://www.geemarc.com)  
 United Kingdom: 5B Swallow Court, Swallowfields, Welwyn Garden City,  
 Hertfordshire, AL7 1SB, UK  
 telephone **01707 387602** or fax **01707 832529**


## 9. Unit description

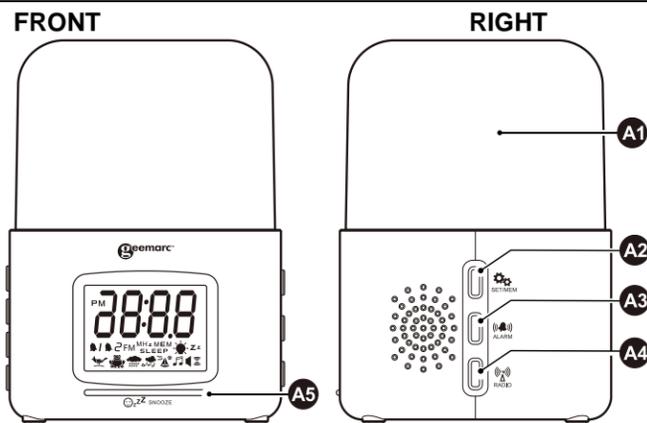


- A1. LED light
- A2. SET/MEM button (for adjusting time and radio station storage)
- A3. ALARM button (for adjusting the alarm time n alarm type)
- A4. RADIO button (for activating the radio function)
- A5. SNOOZE button (for activating snooze function, goodnight function or Wake up light function)

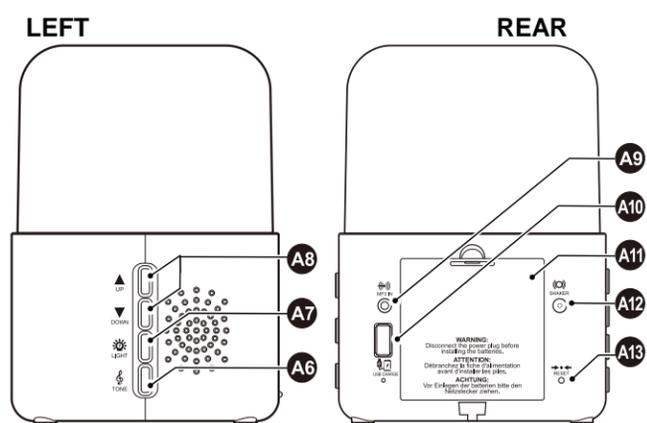

- A6. TONE button (for adjusting the volume and selecting alarm tone)
- A7. LIGHT button (for switching on/off the light and adjusting the back light and colour mood light selecting)
- A8. UP/Down button (For adjusting time, alarm and volume)
- A9. Aux Input Jack (For connecting the MP3 input)
- A10. USB port (for charging a smart phone)
- A11. Battery compartment with cover
- A12. Shaker Jack (for connecting the shaker)
- A13. Reset-Hole (Resetting the device to factory settings)
- A14. Switching power adaptor (Select UK adaptor)

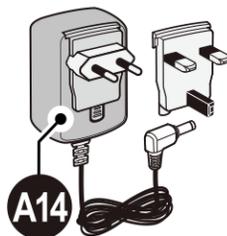

## 10. Display description

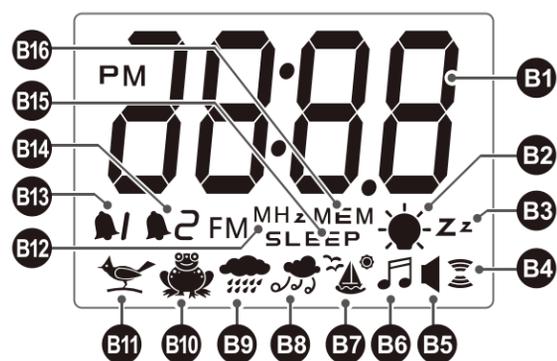

- B1. Time / alarm time or radio frequency
- B2. Light symbol
- B3. Auto turn off (Good night)
- B4. Shaker
- B5. Beep Alarm sound
- B6. Radio
- B7. Seagull sound
- B8. Wind sound
- B9. Rain forest sound
- B10. Frog sound
- B11. Bird sound
- B12. FM radio frequency
- B13. Alarm 1
- B14. Alarm 2
- B15. Sleep
- B16. Radio station memory

## 11. Operation

**NOTE:** - All settings will go back to normal time mode after **6 seconds**.

You must complete each section completely without stopping for more than **6 seconds** otherwise it will return to the beginning of the section.

### 11.1 Setting the time

• Shortly press the <b>SET MEM</b> (A2) button, the hour will flash.	12:00
• Press the <b>Up</b> (A8) button to set the hour.	12
• Press the <b>DOWN</b> (A8) button to set the minute then	00
• Press the <b>SET MEM</b> (A2) button, Choose between 12 and 24 hour format with the <b>UP</b> / <b>DOWN</b> (A8) buttons.	12 hr
• Press the <b>SET MEM</b> (A2) button, Choose Snooze time 5 to 30 minutes at 5 minutes steps (Default is 5 minutes) with the <b>UP</b> / <b>DOWN</b> (A8) buttons.	ZZ 05
• Press the <b>SET MEM</b> (A2) button to exit (Time is set).	12:00

### 11.2 Setting and turning on/off the alarm

<ul style="list-style-type: none"> <li>• Short press the <b>ALARM</b> (A3) button <b>once</b>, to set Alarm 1.</li> <li>• Then press and hold the <b>ALARM</b> (A3) button until the alarm tone sounds. Set the alarm time by pressing <b>UP</b> to set the Hour or <b>DOWN</b> to set the minutes (A8) button.</li> <li>• Then to change the alarm sound ( the alarm must be on), short press <b>SET MEM</b> (A2) button until you reach your desired alarm sound. The alarm sound will be displayed on the screen. <b>The bird, frog, rain forest, wind, seagull, radio or beep</b> It will display a sound.</li> <li>•  and then short press <b>ALARM</b> (A3) twice.</li> </ul> <p><b>NOTE:</b> - If you want the shaker to vibrate when the alarm is activated then plug it in at the back of the clock in (A12)-</p>	
<p>If you do not want the alarm to ring (turn it off completely) then short press the <b>ALARM</b> (A3) button and then press and hold the <b>ALARM</b> (A3) until the <b>alarm off</b> is displayed on the screen.</p>	OFF
<p>If you want to activate Alarm 2 then repeat the above procedure but short press <b>ALARM</b> (A3) twice.</p>	

### 11.3 Setting the light to wake you up

<ul style="list-style-type: none"> <li>• Press and hold <b>SNOOZE</b> (A5) button until the  is shown in the display.</li> <li>• Press the <b>UP</b> or <b>DOWN</b> (A8) button to set the wake up light to OFF, 15 or 30 or minutes.</li> <li>• The wake up light will gradually brighten before the alarm goes off.</li> </ul>	
--	--

### 11.4 Alarm Tone

<ul style="list-style-type: none"> <li>• Press the <b>TONE</b> (A6) button when the clock is in normal time mode.</li> <li>• Press the <b>UP</b> or <b>DOWN</b> (A8) button to set the tone to one of the 10 possible tone levels.</li> </ul>	F05
---	-----

### 11.5 Alarm Volume

<ul style="list-style-type: none"> <li>• Press the <b>UP</b> or <b>DOWN</b> (A8) button at normal Time mode for setting the volume of alarm. Default volume is U08 and maximum level is U20.</li> </ul>	U08
---	-----

### 11.6 Connecting Shaker Vibrator

<ul style="list-style-type: none"> <li>• Connect shaker vibrator at rear jack (A12).</li> </ul>	
---	--

### 11.7 Light Function

<ul style="list-style-type: none"> <li>• Shortly press the <b>LIGHT</b> (A7) button in normal Time mode. The lamp will light up.</li> </ul>	
<ul style="list-style-type: none"> <li>• Press the <b>UP</b> or <b>DOWN</b> (A8) button adjusting the light brightness. The default intensity L07 shown and the max brightness is L15.</li> </ul>	L07
<ul style="list-style-type: none"> <li>• Press the <b>LIGHT</b> (A7) button again. To switch OFF the light.</li> </ul>	

### 11.8 Radio Function

<ul style="list-style-type: none"> <li>• Press the <b>RADIO</b> (A4) button in normal Time mode. The radio frequency currently set will appear on the display.</li> <li>• Press the <b>UP</b> or <b>DOWN</b> (A8) button to set the desired radio frequency. <b>Tip:</b> to start the automatic scan, press and hold the <b>UP</b> or <b>DOWN</b> (A8) button until the scan start and then release it again.</li> </ul>	
<ul style="list-style-type: none"> <li>• Press the <b>TONE</b> (A6) button to set the default Volume: U06 will show on the display.</li> <li>• Press the <b>UP</b> or <b>DOWN</b> (A8) button to adjust the volume. The max volume is U12.</li> </ul>	U06

### 11.9 Preset Radio Station / Listening Preset Radio Station

<ul style="list-style-type: none"> <li>• While listening, press and hold the <b>SET MEM</b> (A2) button until S01 shows. The current radio station is stored in S01.</li> <li>• Select a new radio station and then press and hold the <b>SET MEM</b> (A2) button until S02 shows. The new desired radio station is stored in S02. A maximum of 10 radio stations can be stored. Repeat process to store other preset stations.</li> </ul>	S01 S02
<p>To use a register memory, in mode radio, press the button <b>SET MEM</b> (A2), S01 is shown or press again to show S02 and <b>TONE</b> (A6) button to valid</p>	S01 S02

### 11.10 Goodnight function

<ul style="list-style-type: none"> <li>• Have either the light or the radio on and then press and hold the <b>SNOOZE</b> (A5) button and <b>SLEEP OFF</b> will be shown on the display.</li> <li>• Press the <b>UP</b> or <b>DOWN</b> (A8) button to select desired "switch off" time from 5 minutes to 90 minutes.</li> <li>• You will see the <b>SLEEP</b> icon flashing on the display</li> </ul>	SLEEP OFF
<ul style="list-style-type: none"> <li>• If you want to see how much time remains before the light/radio goes off then short Press and hold the <b>SNOOZE</b> (A5) button.</li> </ul>	SLEEP

### 11.11 Display Illumination

<ul style="list-style-type: none"> <li>• Press and hold the <b>LIGHT</b> (A7) button until U03 shown at normal time mode. Adjusting the display brightness by press the Light button each times. The brightness changes U03&gt;U04&gt;U01&gt;U02, Max brightness is U04.</li> </ul>	U03
---	-----

### 11.12 MP3 Playback Function

<ul style="list-style-type: none"> <li>• Press the <b>RADIO</b> (A4) button.</li> <li>• Connect the MP3 to the rear jack (A9) by cable.</li> <li>• <b>AU</b> shown on display.</li> </ul>	AU
<ul style="list-style-type: none"> <li>• Press the <b>TONE</b> (A6) button. The default Volume U06 will show on the display.</li> <li>• Press the <b>UP</b> or <b>DOWN</b> (A8) button for adjusting the volume, and the max volume is U12.</li> </ul>	U06

**NOTE:** when the audio cable is connected to rear jack (A9), the radio mode is not available.

### 11.13 Smart Phone Charger Function

<ul style="list-style-type: none"> <li>• Connect your Smart Phone with USB cable to rear USB socket (A10) to charge</li> </ul>	
--	--