Personal Hygiene Appliance



Operating Instruction Manual

UB-7035R/7235 7220/7215 7210/7000

Uspa :::



SAMHONGTECH CO., LTD

2ND FLOOR EUNSUNG BUILDING 741, YEONGDONG-DAERO, GANGNAM-GU, SEOUL, KOREA

TEL:82-2-3449-2341 FAX:82-2-3449-2309 http://www.samhongtech.co.kr

USPA EUROPE S.R.L.

VIA MONTEVERDI, 8 28100 NOVARA-ITALY

TEL:+39-0321-030449 FAX:+39-0321-031648 http://www.uspa.eu info@uspa.eu

6609-1629-01 V1.20

Thank you for purchasing this USPA product.

- You are kindly requested to read carefully this operation manual for proper use of this appliance with due attention.
- Please save this manual and place it in an easily accessible location.
- Please register warranty for proper service.

THIS UNIT WAS MANUFACTURED FOR HOUSEHOLD USE ONLY. READ ALL OPERATING INSTRUCTIONS BEFORE INSTALLATION.

Notes

- 1. This product should be installed according to this manual.
- 2. Please read this manual carefully and install this appliance properly.
- 3. Please save this manual and place it in an easily accessible location.
- 4. Do not attempt to repair this appliance by yourself. Doing so could void the warranty.



This marking shown on the product or its literature, indicated that it should not be disposed with other household wasted at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial waste for disposal

Table of Contents

PREPARATION

1. IMPORTANT SAFEGUARDS	1
2. CAUTIONS BEFORE INSTALLATION	2
3. IDENTIFICATION	3
4. SAFETY INFORMATION (DANGER)	4
5. SAFETY INFORMATION (WARNING) ———	6
HOW TO USE	

6. HOW TO USE	
7. HOW TO CLEAN	12
8. MAINTENANCE	13

INSTALLATION

9.	HOW TO INSTALL	 14
9.	HOW TO INSTALL	14

ETC

10. BEFORE CALLING FOR SERVICE	17
11. SPECIFICATIONS	17
12. WARRANTY	18

1 Important Safeguards

READ ALL INSTRUCTIONS BEFORE USING

DANGER - To reduce the risk of electric shock:

- 1. Do not place or store this appliance where it can fall or be pulled into a tub or sink
- 2. Do not place in, or drop into water or other liquid.
- 3. Do not reach for a product that has fallen into water. Unplug immediately.

WARNING - To reduce the risk of burns, electric shock, fire or injury to people.

- Close supervision is necessary when this appliance is used by or near children, elderly or invalid. Children should not be permitted to use or touch this appliance without the supervision of an adult. Be sure to adjust the temperature of the toilet seat for the elderly, those who are incapacitated, or people with sensitive skins.
- 2. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer.
- 3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged or dropped into water.
- 4. Install this appliance properly according to this manual.
- 5. Only authorized people can install or repair this appliance. Do not attempt to repair this appliance by yourself, doing so could void the warranty.
- 6. Keep the cord away from heated surfaces.
- 7. Never drop or insert any objects into any opening or hose.
- 8. Do not use outdoors. Do not use aerosol or oxygen spray products on the unit.
- 9. Always follow the grounding instruction in this manual before plugging in.
- 10. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified people in order to avoid a hazard.
- 11. This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible for their safety.
- 12. Children should be supervised to ensure that they do not play with this appliance.

SAVE THESE INSTRUCTIONS

NOTE THE FOLLOWING IMPORTANT POINTS

- 1. Do not install in a location where water might be splashed on this appliance or in a location exposed to such an excessive moisture that condensation forms on the product surface.
- 2. To avoid damage to electronic components due to high levels of humidity, provide adequate ventilation by opening a window and/or door when bathing. You may find operating an exhaust ventilating fan during these times of high humidity beneficial
- 3. The new hose-set supplied with the appliance should be used and the old hose-set should not be reused.
- 4. Use a water supply having a water pressure 0.05 MPa ~ 0.75 MPa.
- 5. Connect the product to a pipe carrying potable water. Do not connect to an industrial water line or other water supply that does not carry water of drinking quality.
- 6. In areas where water freezes during pipes in winter make arrangements to keep the pipes warm. The water remaining in the unit may sometimes freeze during storage in winter. In that case, warm the unit in the room before installation.
- 7. The thermal protector in the water tank may sometimes trip during storage or transportation in warm weather causing non-operation. In that case, cool the unit in the room before installation.
- 8. The rated power voltage is 220~240V / 50~60Hz.
- 9. Do not supply electrical power to the unit until the plumbing installation work has been completed; it could cause malfunction.
- 10. Unplug the appliance during maintenance and cleaning.




WARNING

Before installing this product, always observe the local laws and regulations regarding installation

In countries where power outlets are not permitted in bathrooms, such as U.K. or Ireland, please consult a qualified electrician for advice on connecting this unit to a power supply. The European two pin plug should be removed and the unit should be connected to the mains by a qualified electrician.


In such countries, every time the operating instruction manual refers to unplug the power cord, the user must instead switch off the circuit.







3 Identification

1. Main unit

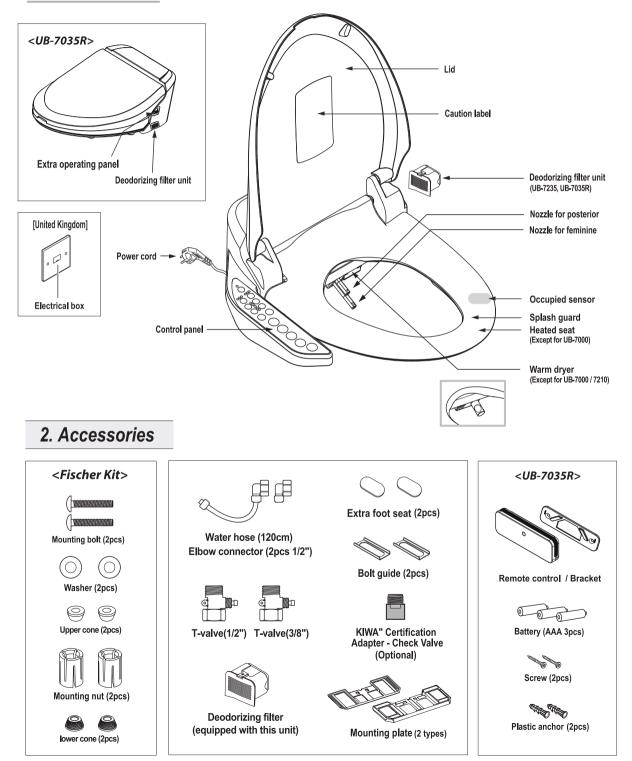


4 Safety Information (Danger)

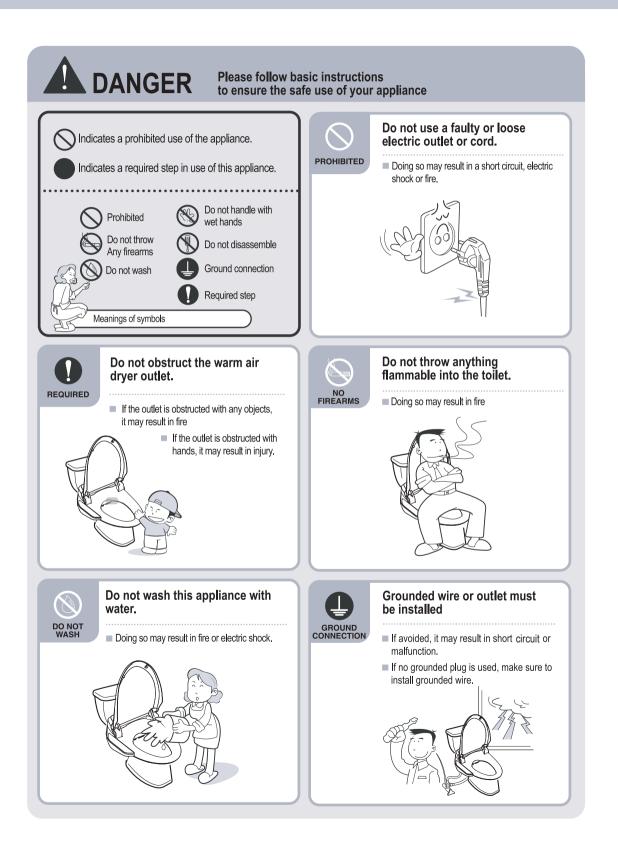

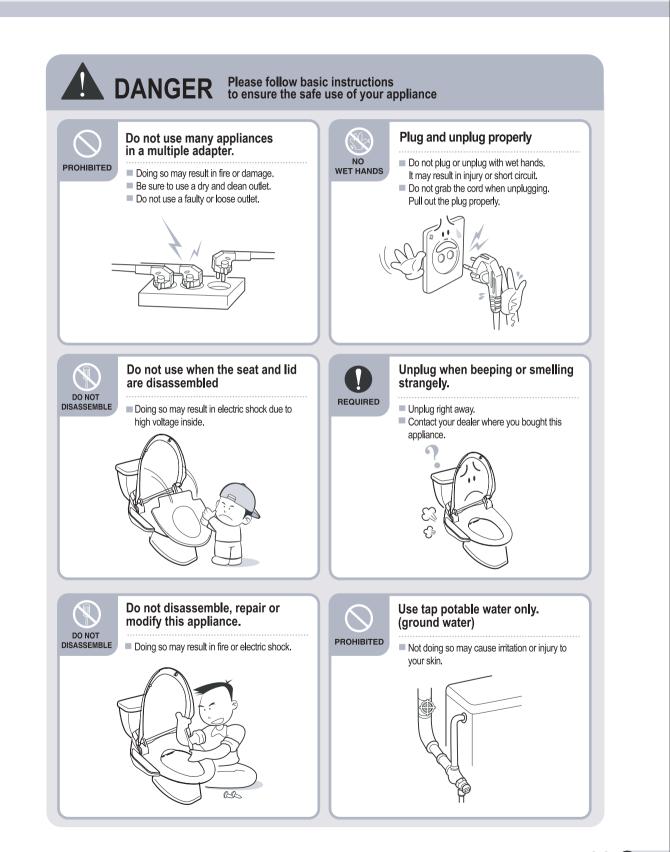

5 Safety Information (Warning)

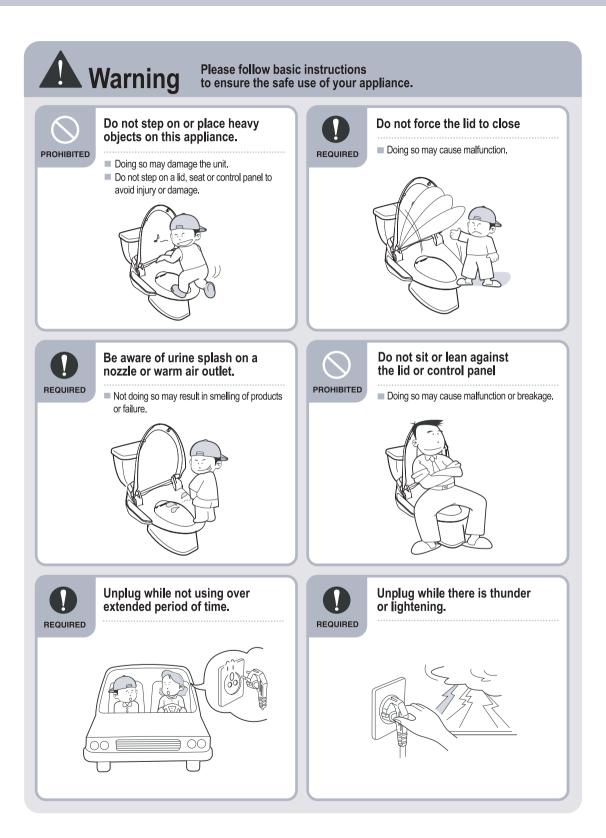



Uspa

(7)

6 How to use UB-7235/7220/7215/7210/7000

%Caution

- All functions will be operational when the seat is occupied except Nozzle cleaning, Power/Economy.
- Before operating, ensure that the water tank is filled up completely.

Stop

- Press "Stop" to stop current operation.
- When a user stands up, all operation will stop automatically.

Cleansing

- Press "Cleansing" to clean your posterior. The function will stop in 60 seconds automatically.
- Press this button again to activate oscillation. The nozzle moves back and forth automatically to widen cleansing area.
- Oscillation wash stops if this button is pressed again.

Bidet

- Press "Bidet" for feminine wash. The function will stop in 60 seconds automatically.
- Press this button again to activate oscillation. The nozzle moves back and forth automatically to widen cleansing area.
- Oscillation wash stops if this button is pressed again.

Dry (Warm air) (UB-7235 / 7220 / 7215)


- Press "Dry" button. The dryer nozzle comes out (level 3, position 3). This function will stop in 180 seconds automatically.
- Press this button again to switch between Soft and Turbo drying modes.

IIP (intensive impulse pulsation) (UB-7235 / 7220 / 7210)

- Intensive water pulsation (water pressure level 5) may help you for easier defecation. This function will stop in 60 seconds automatically.

Kids / Auto (UB-7235 / 7220 / 7210)


- Press "Kids/Auto" to change all functions to be suitable for children. The following settings will be selected:
- Posterior nozzle in oscillating mode: 1 min (pressure level 1, position 5). Drying: 3 mins.
- Children should use this unit under adult supervision.
- Press "Kids/Auto" twice to activate Automatic function
- The following settings will be selected:
- · Feminine nozzle: Wash Oscillation Pulsation will operate consecutively for 1 min (pressure level 3, position 3).
- Drying: 3 mins (level 3, position 3).

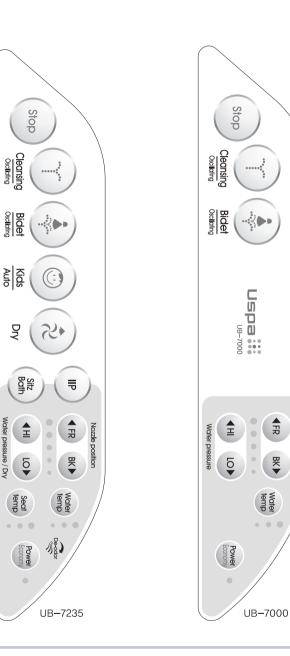

Self-diagnosis system

- This appliance has a self-diagnosis system
- If the appliance experiences a problem, a power LED will blink.
- Unplug and contact customer center immediately.

* When the power is plugged in initially, nozzles for feminine and posterior wash will come out in turn.

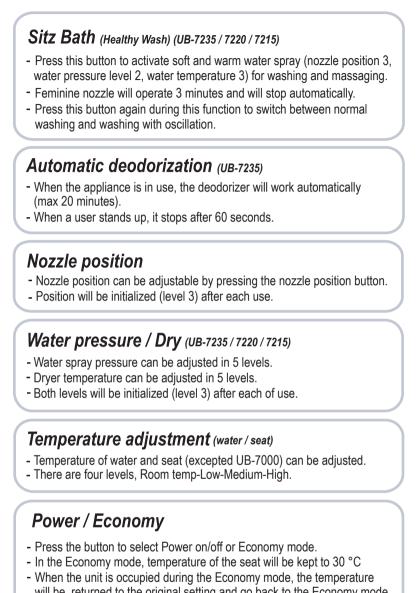

- will be returned to the original setting and go back to the Economy mode after each use.
- Red light: Normal mode
- Green light: Economy mode
- Off: Power off

Self cleaning

- This appliance automatically cleans its nozzles before and after every use.

* All the operating times indicated are approximate.

6 How to use UB-7035R

When the power is plugged in initially, nozzles for feminine wash and posterior will come out in turn.All the operating times indicated are approximate.

Cleansing

- Press "Cleansing" to clean your posterior. The function will stop in 60 seconds automatically.
- Cleansing function can be activated in 3 modes:
 Press the button 1st time: Normal cleansing.
 2nd time: Cleansing with oscillation to widen cleansing area.
 3rd time: Cleansing with oscillation and pulsation.
 4th time: Normal cleansing again.

Bidet

- Press "Bidet" for feminine wash. The function will stop in 60 seconds automatically.
- -Bidet function can be activated in 3 modes: Press the button 1st time: Normal Washing.
- 2nd time: Washing with oscillation.
- 3rd time: Washing with oscillation and pulsation.
- 4th time: Normal washing again.

Kids

- Press "Kids/Auto" to change all functions to be suitable for children. The following settings will be selected.
- Oscillation 1 min
 Drying 3 mins
- · Water pressure level 1 · Nozzle position level 5
- Press this button again to activate different modes: Cleansing with oscillation, Clensing with oscillation and pulsation, Normal cleansing.
- Children should use this unit under adult supervision.

Auto

- Press "Kids/Auto" button twice within one second to activate the automatic funcion. The following settings will be selected:
- Normal cleansing (20sec), Cleansing with oscillation (20sec), Cleansing with oscillation and pulsation (20sec), Drying (3min), Stop functions will operate consecutively.

Dry (Warm air)

- Press "Dry" button. The dryer nozzle comes out and drying function will operate during 3 min.
- Press this button again to switch between Soft and Turbo drying modes.

Stop

- Press "Stop" to stop current operation.
- When a user stands up, all operations will stop automatically.



Side control buttons

- Use side control buttons on the unit when the remote control is broken or the charge of batteries is low.
- While seated, press "Cleansing" on the right side or "Bidet" on the left side to start. Press again to stop. Do not use sharp items to press buttons.



Power / Economy

- Press "Bidet" on the left side panel to select Power on/off or Economy mode.
- In the economy mode, temperature of the seat will be kept to 30 degrees.
 When the unit is occupied during the economy mode, the temperature of the water and seat will be returned to the original setting and go back to the original setting and go back to the seath water.
- economy mode after each use
- · Red light: Normal mode · Green light: Economy mode · Off: Power off

Self-diagnosis system

-This appliance has a self-diagnosis system.

- If the appliance experiences a problem, the power LED will blink.
- Unplug and contact customer center immediately.

Self cleaning

- This appliance automatically cleans its nozzles before and after every use (see page 12).

SITZ BATH (Healthy wash)

- Press this button to activate soft and warm water spray (water temperature level 3, water pressure level 1) for washing and massaging.
- Feminine nozzle will operate 3 minutes and stops automatically.
 Press this button again during this function to switch between normal washing and washing with oscillation.

IIP (Intensive impulse pulsation)

Press "SITZ BATH/IIP" twice within one second to activate IIP function to have easy defecation. It works for 60 seconds and stops automatically.
Press "IIP" button again to change the frequency of the pulsation mode (3 different modes available). Initially water pressure is set to level 5.

Water temperature adjustment

- Press the button to adjust water temperature to Room temp-Low-Mid-High.
- -LED lamp will indicate the level:
- Room temp: LED is off Low temp: 1 LED is on
- Mid temp: 2 LED is on High temp: 3 LED is on

Water pressure

- Water spray pressure is adjustable to the desired pressure
- by pressing $\bigwedge_{m} \bigtriangledown$ button from 1 to 5 when being used.
- -During Drying function it will adjust air flow temperature.
- -Both levels will be initialized (level 3) after each use.

Nozzle Position

- Nozzle position is adjustable by pressing $\bigwedge_{\text{FR}} \cdot \bigotimes_{\text{BK}}$ from 1 to 5 positions when being used. Position will be initialized (level 3) after each use.

Seat Temperature adjustment

Press the button to adjust seat temperature to Room temp-Low-Mid-High.
LED lamp will indicate the level: Room temp: LED is off Low temp: 1 LED is on

- Room temp: LED is off Low ter Mid temp: 2 LED is on High te
 - is on High temp: 3 LED is on


Automatic deodorization (max 20minutes)

- When the appliance is in use, the deodorizer will work automatically.
- When a user stands up, it stops after 60 seconds.


※Caution

- Be aware of not dropping the remote control in water. It may cause malfunction.
- All functions will be operational when the seat is occupied except
- Nozzle cleaning, Power/Economy
- Before operating, ensure that the water tank is filled up completely.

7 How to clean

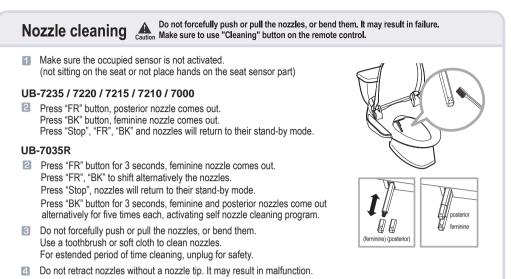

5 Beware of losing or switching nozzle tips.

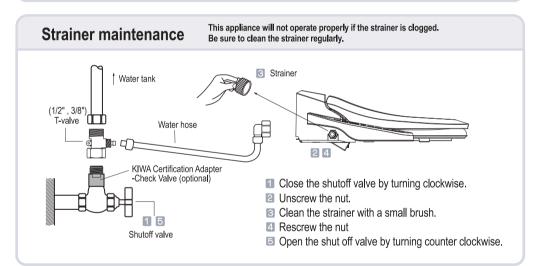

Cleaning the body

- Regularly wipe off the body with a dry soft or sponge, or dampen with neutral detergent.
- Release the lid
 - 1. Pull left and up the left hinge part.
 - 2. Release the right hinge part (Be aware your fingers not to be caught)
- For care of plastic body, do not use any cleansers which are not safe to use on toilet seats.

(toilet cleanser, home cleanser, bleach, benzene, paint thinner, cresol etc)







8 Maintenance



Uspa 🔛 13

How to install 9



Do not plug in until installation is finished completely. Not doing so may damage the appliance.

If electric work is needed, contact a qualified electrician or serviceman only.

Remove the existing toilet lid and seat


- 1. Remove the nuts, washers and cone packings from the toilet seat mounting bolts in the back of the toilet.
- 2. Remove the toilet seat. lid and mounting bolts.
- 3. Keep them in case of installing again.

Install the appliance

Installation

How to mount the plate

Place the plate and guides over each mounting hole. Insert the mounting bolts respecting the sequence shown in the picture.

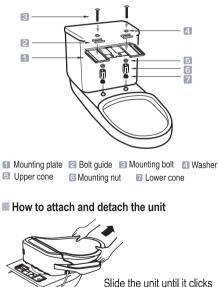






Toilet size


The toilet dimensions must be within those shown below. Do not install this appliance on a toilet that does not meet those dimensional requirements.

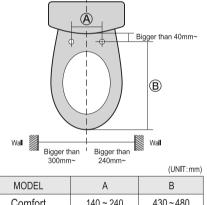


MODEL	A	Ь
Comfort	140 ~ 240	430~480
Standard	140 ~ 240	400~450
Design	140 ~ 240	410~460

Occupied sensor

This appliance is equipped with occupied sensor. Unit will not work unless seat is occupied.



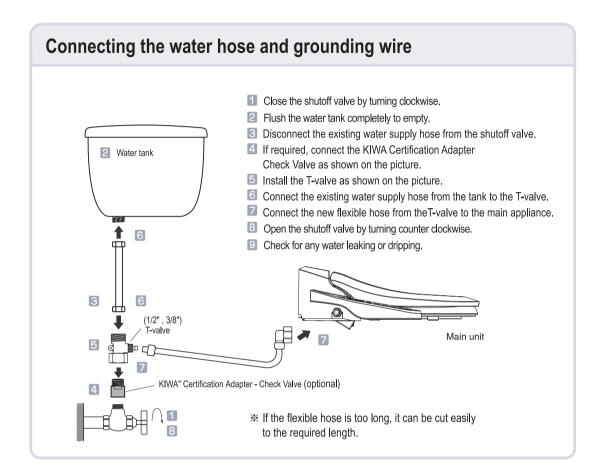

Trial operation

1. Preparation

Plug the power cord into the outlet. Press "BIDET" or "CLEANSING", then water tank will be filled within 30 seconds after the water tank has filled up, you will hear a long buzzer sound.

2. Checking all functions

Cover the toilet bowl using the plastic wrapping sheet of the unit to prevent water from being sprayed out of the toilet.

Then check for all the functions described in this manual.

3. During trial operation there are possibilities of remaining water coming out from the unit while heating.

Remote control unit


How to insert batteries



- Open the battery lid of the remote control and insert 3 AAA batteries into the battery compartment.
 Check if the remote control works properly while the seat is being occupied.
- Use 3 AAA batteries only. Do not use rechargeable batteries.
- Do not use old and new batteries together. Use same type of batteries only.
- Make sure that all batteries are inserted correctly.
- Remove the batteries if the remote control is not used for a long time.

How to attach the remote control bracket to the wall

- Use screws with the plastic anchors or attach the bracket with the sticker.

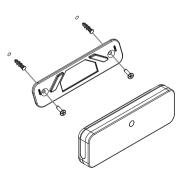



10 Before calling for service

Problem	Possible cause	Solution
Completely fail to work	Is there a power cord outage? Is the power cord unplugged? Are you sitting on the seat correctly?	Check for a power cord failure or a tripped breaker Plug the power cord in properly Sit on the seat completely
Water does not spray	Is the water shutoff valve closed? Is the strainer clogged? Are the nozzles clogged?	Open the shutoff valve Clean the strainer Clean the nozzles
Water is leaking or dripping	Check if all hoses are tightened properly	If water is still leaking or dripping, contact your dealer
Seat, water or air is not enough warm	Is the temperature set to OFF? Is appliance used in economy mode during a cold weather?	Set the temperature following the instructions in this manual Release the economy function

11 Specifications

Item		UB-7035R	UB-7235	UB-7220	UB-7215	UB-7210	UB-7000	
Standar	d power supply		220~240V / 50~60Hz 1660~1975W				220~240V / 50~60Hz 1605~1910W	
Water	Way of connection		Direct connection to tap water					
supply	Water pressure	0.05MPa~0.75MPa						
	Spray for cleansing	650 ± (100) mℓ /min						
	Spray for bidet		650±(100)mℓ/min					
	Water capacity	200 ml						
Clean- sing	Spray temperature			Room ⁻	emp~40°C(104	°F)		
Sing	Heat capacity			220~240)V / 1600W~190	WOO		
	Safety feature	Thermal switch, Temperature fuse, Floating switch						
	Air temperature	Room Temp~60°C(140°F)				one		
Dry	Heater capacity	220~240V / 280~333W			N	None		
	Safety feature	Temperature fuse None				one		
	Seat temperature	Room Temp~40 °C(104 °F) None					None	
Heated Heater capacity		220~240V / 55~65W			None			
	Safety feature			Temperature fu		None		
Deodo	prization method	tion method Catalystic filter None						
Circuit	breaker	Within 15mA 0.03 second						
Length of power cord 1.5m								
Dimensio	Comfort	(W)392X(L)520X(H)157mm	(W)466X(L)520X(H)157mm					
	ons Standard	(W)392X(L)490X(H)157mm	n (W)466 X(L)490X(H)157mm					
	Design	(W)392X(L)504X(H)157mm	/mm (W)466X(L)504X(H)157mm					
Weigł	nt	4 <u>.</u> 2Kg	4.4Kg 4.2Kg					

<u></u>			
R.	WARRA	ANTY	
ISPA Personal Hygien	e Appliance Limited Warr	anty	
	e free from manufacturing defects ase. Only the ORIGINAL PURCH		and service for a period of two(2) a claim under this limited warranty.
provided that the products we inspections in order to determ	re properly installed and used in a	ccordance with inst ill not charge for lab	option, of defective products or parts, ructions. We reserve the right to make or or parts in connection with warranty or reinstallation of products.
c) Damage or loss from impro	t apply to: earthquake, flood, storm, etc rom any unreasonable use, abuse oper installation, removal, repair, o rom sediment or other matters con	r modification.	
This warranty gives you spec	fic legal rights.		
For warranty or service inform	nation, please contact your dealer	where you bought t	his appliance or please contact us.
Only the original purchaser m	ay submit a claim under this limite	d warranty. To activ	vate your warranty, complete this form.
shall be the exclusive remedy or consequential damage or e repairs by others, or for any c any implied warranties, includ Warning! We are not respons	vavailable to you. We shall not be expenses you may incur or for labor ther expense not specifically state ing that of merchantability or fitnes ible or liable for any failure of or da	responsible for loss or or other costs due d above. Except to ss for use are expre	nent as provided under this warranty s of the product or for other incidental, e to installation or removal or cost or the extent prohibited by appliance law, ssly limited to the duration of this warra ping product component caused
			nage the fittings. This damage can caus
For more information, please	·		
Purchase Date		Purchase fron	ı
Invoice #	Amount Paid	_	Serial #
Address	City	Country	Zip
Phone	Fax	E	i-mail
TEL : +39 0321 03044 http://www.uspa.eu			
info@uspa.eu	Gı	reat products fo	or your healthy living!

